

# Microinverter User Manual

V 1.0



Microinverter  
Model  
SPD-800

# Herald

Before using this product, read this document carefully to understand and use it correctly.

Keep this document in a safe place for future reference.

Improper operation may cause injury or damage.

By using this product, you agree to the terms and conditions in this document.

The Company is not liable for damages due to improper use.

The Company has the final interpretation of this document and related documents.

Check the official website for updates to this document.

## Catalogs

|  |           |
|--|-----------|
| <b>1. Important notes</b>                                    | <b>2</b>  |
| 1.1 Product Scope  | 2         |
| 1.2 Important safety instructions                            | 2         |
| 1.3 Environmental requirements                               | 2         |
| <b>2. Overview</b>   | <b>3</b>  |
| 2.1 Overview of Grid-connected PV Inverter Systems           | 3         |
| 2.2 Microinverter Overview                                   | 3         |
| 2.3 Functional Introduction                                  | 3         |
| 2.4 System Monitoring  | 4         |
| <b>3. Installation</b>                                       | <b>4</b>  |
| 3.1 Installation requirements                                | 4         |
| 3.2 Installation position                                    | 4         |
| 3.3 Installation method                                      | 4         |
| 3.4 Installation procedure                                   | 5         |
| 3.5 Wiring diagram   | 7         |
| <b>4. APP</b>  | <b>7</b>  |
| 4.1 Download APP   | 7         |
| 4.2 Register account   | 7         |
| 4.3 Connect the microinverter                                | 8         |
| 4.4 Reset the program  | 8         |
| 4.5 Indicator light status                                   | 9         |
| 4.6 Troubleshooting  | 9         |
| <b>5. Data sheets</b>  | <b>10</b> |
| <b>6. Purchase accessories separately</b>                    | <b>11</b> |
| 6.1 List of additional accessories and tools to be purchased | 11        |
| 6.2 Parallel cable laying                                    | 11        |

---

# 1. Important notes

## 1.1 Product Scope

This manual describes the assembly, installation, commissioning, maintenance and troubleshooting of the following models of microinverters.

## 1.2 Important safety instructions

- 1, Before installing, using or servicing this product, please read all documentation carefully, which may have changed due to product updates or other reasons.
- 2, All operations, including transportation, installation, startup and maintenance, must be performed by trained and qualified personnel.
- 3, Before installation, check the packaging and appearance of the unit to ensure that it has not been damaged during transportation.
- 4, Before connecting, make sure all cables and plugs are intact and dry to avoid electric shock.
- 5, Before the end of the installation, you should make sure that the solar PV panels, microinverter is disconnected from the home power supply.
- 6, Personal protective equipment such as gloves and goggles must be used during installation.
- 7, Do not install or operate the equipment under extreme weather conditions, such as lightning, snow, heavy rain, strong winds.
- 8, The warning signs on the equipment must not be damaged, painted or torn off.
- 9, After installation, remove any remnants of the installation, such as cut cable ties, torn insulation, etc.
- 10, Do not attempt to repair the microinverter, if a malfunction occurs, contact our customer support department and initiate the replacement process. Private repair or opening the microinverter will void the warranty policy.
- 11, Understand the components and functions of the grid-connected PV system and make sure that all electrical connections, as well as the voltage and frequency of the equipment, comply with local electrical standards.
- 12, Use extreme caution whenever disconnecting the inverter from the utility grid, as certain components may retain enough electrical charge to create an electrical shock hazard.  
Danger of electric shock.
- 13, Make sure that the microinverter is securely mounted to prevent accidents or damage to the product from falling.
- 14, For safety reasons, the device should use original or authorized cables, we are not responsible for damage to the device caused by the use of third-party accessories.


## 1.3 Environmental requirements

- 1, Make sure the equipment is installed, operated or stored in a well-ventilated area; inadequate ventilation can cause permanent damage to the equipment.
- 2, Do not install or place the equipment in a strong electrical and magnetic field environment to avoid radio interference.
- 3, Do not install the equipment in flammable, explosive, corrosive, extremely hot, cold and humid environments.
- 4, Do not install the device where children and pets can touch it.


## 2. Overview

### 2.1 Overview of grid-connected PV inverter systems


The grid-connected PV inverter system consists of a PV module, a microinverter, a power meter and a power grid. The microinverter converts the DC power from the PV module into AC power that meets the requirements of the grid and is connected to the grid through the meter.

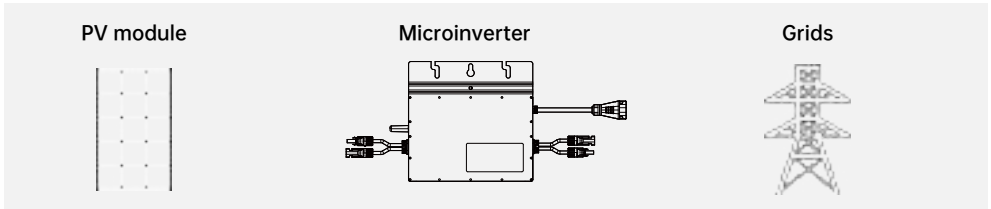

Single Microinverter Connection Diagram

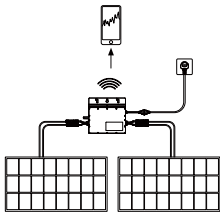

Multiple Microinverter Connection Diagram

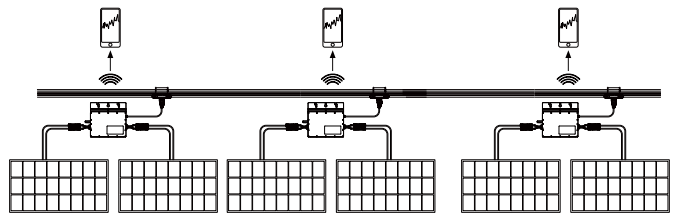

### 2.2 Microinverter Overview

The microinverter tracks the maximum power point of the PV module.

When one PV module fails or is shaded, the other modules are not affected.


Microinverters monitor current, voltage and power for module-level data monitoring.

Microinverters are low voltage DC, avoiding the safety risks associated with high voltage DC.

Microinverters can be installed according to the number of PV modules, easy installation.

The microinverter housing is IP67 rated and designed for outdoor installation.

### 2.3 Functionality

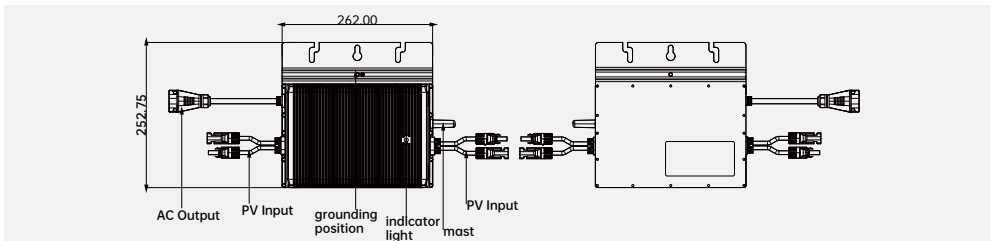

## 2.4 System monitoring

The microinverter is connected to the Internet through a broadband router, and after following the operating instructions to connect to the system platform, the platform will display current and historical performance trends and informs the status of the PV system in real time.

# 3. Installation

## 3.1 Installation requirements

The installation must disconnect the equipment from the grid and isolate the PV modules.

Ensure that environmental conditions are appropriate (temperature, humidity, altitude, etc.).

Avoid direct sunlight to prevent power reduction due to increased internal temperature.

Keep the inverter away from gas or flammable materials.

Avoid electromagnetic interference, which can affect the operation of the equipment.


Keep the heat sink mounted 20+ cm from other objects to maintain ventilation.

\*If you want to check the solar system and put it into operation immediately, assemble it in sunny weather.

\*We recommend that at least three people work together during assembly or disassembly.

## 3.2 Installation position

Microinverters can be used in combination with PV modules on roofs, balconies, gardens, and terraces. Select a suitable location before installing a microinverter.

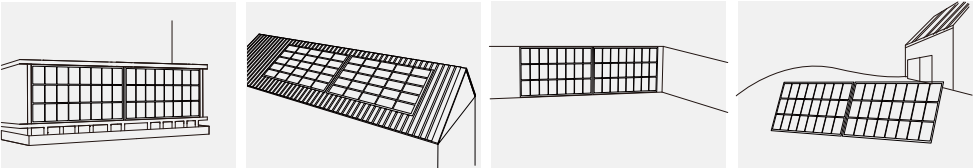

## 3.3 Installation methods

### Fixed horizontally on the solar racking



Product is secured to the stand, keeping it parallel, with the back facing down to keep it ventilated.

### Fixed to the wall

Heatsinks face outward for ventilation.

### Fixed vertically on the solar racking

Stay perpendicular to the PV module.

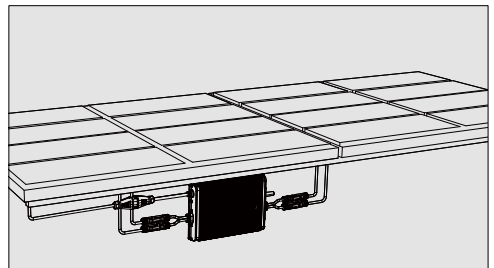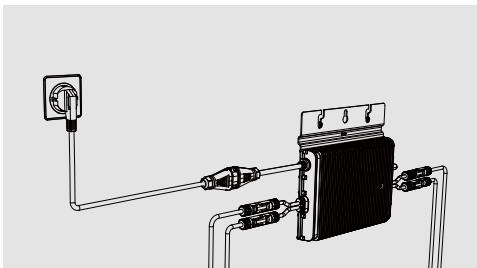

### 3.4 Installation steps

The following section details several key steps in installing a microinverter

Step 1-Determine the installation location

Step 2-Place the Microinverter

Step 3-Fix the Microinverter


Step 4-Connect the power cable

Step 5-Connect to the mains

Step 6-Connect the PV module


#### Step 1-Determine the installation location

Choose a cool place and a place where water is not likely to accumulate, and fix the screws to the PV rail or wall.

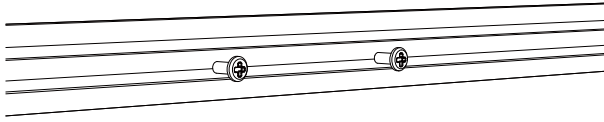


#### Step 2-Place the Microinverter

Hooking up the microinverter to the screws

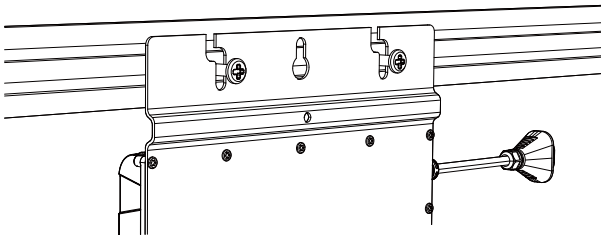


#### Step 3-Fix the Microinverter

Tighten the screws to secure the microinverter

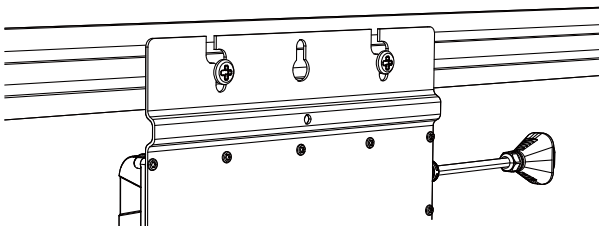


#### Step 4-Connect the power cable

Connect the microinverter AC output connector to the AC power cord.

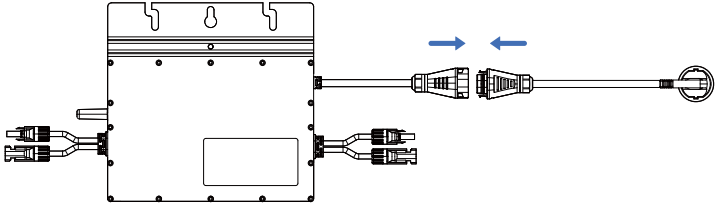


#### Step 5-Connect to the mains

Connecting AC power to the home mains connection


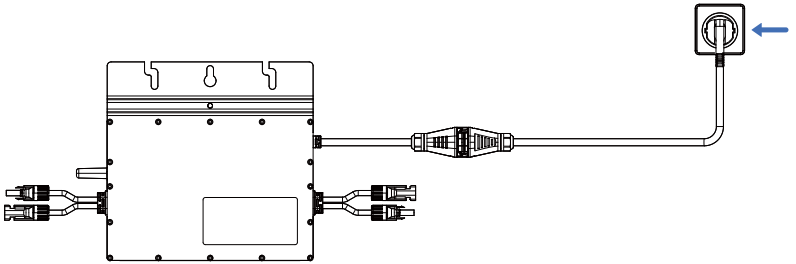


#### Step 6-Connect the PV module

Connect 1 or 2 groups of PVs to the MC4 interface

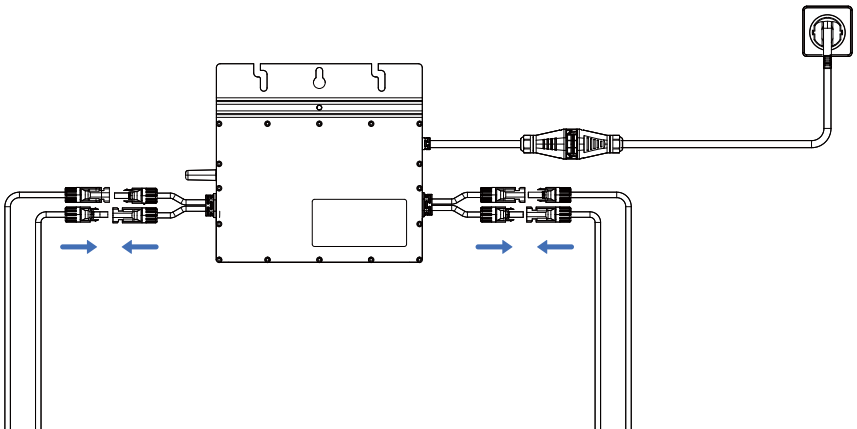

### 3.5 wiring diagram

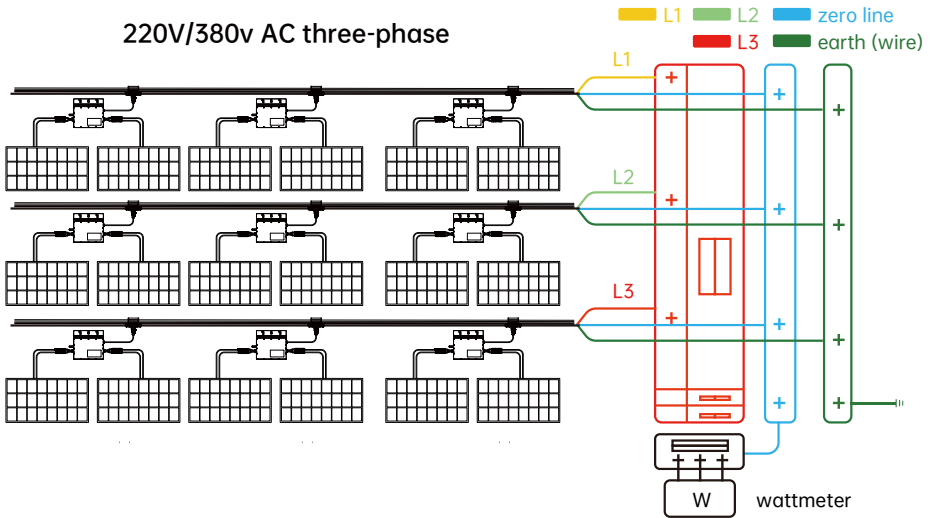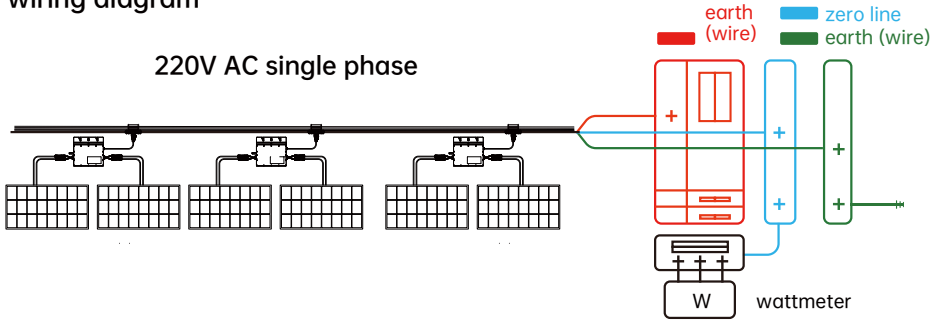

## 4. APP

### 4.1 Download APP

Search "Smart Life" in major app shops or scan the QR code below to download "Smart Life".



### 4.2 Registration of accounts

- 1, Click Sign Up to read and agree to the User Agreement and Privacy Policy and go to the Register page.
- 2, Register an account. the State/Region is specified automatically or you can change it manually. However, the value of this field cannot be changed after registering an account. click Get Verification Code.
- 3, Enter the verification code received and go to the password setting page, set the password as required and click Done.






### 4.3 Connecting the microinverter

- 1, open the Smart Life APP, the microinverter Add button will pop up automatically, click Add to start connecting the microinverter. If the Microinverter Add button does not pop up automatically, you need to manually click the Add Device button to search for nearby devices and enter into the distribution mode.
- 2, follow the prompts to enter the Wi-Fi account and password, click Next button when finished, wait for a few minutes, the microinverter completed the network.



### 4.4 Reset APP

- A) Unplug and reconnect the MC4 connector to which the PV module is connected.
- B) Plug and unplug the AC connector 3 times or the switched outlet 3 times within 20 seconds.
- C) Microinverter indicator light changes to flashing green.
- D) Open APP to search for the device, click Connect to indicate successful reset.

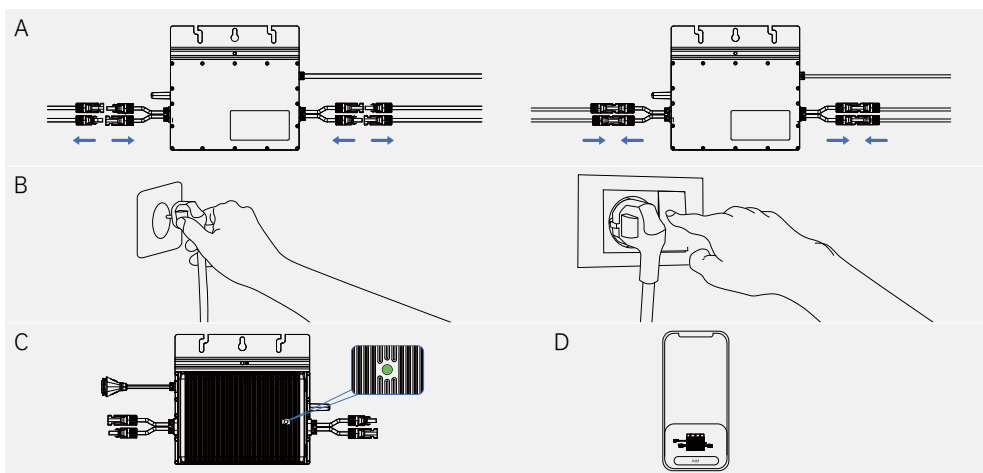

## 4.5 Indicator status

|                                 |   |
|---------------------------------|---|
| Indicator light is not on       | The device is not started, not connected to the pv terminal or the pv has no power. |
| Red light blinking              | Fault display   |
| Red light is on for a long time | Microinverter is not connected to the mains / Device APP Close                      |
| Green light is blinking         | Microinverter sends out signal to connect to cell phone                             |
| Green light is always on        | Microinverter is functioning normally   |

## 4.6 Troubleshooting

| Type of error | Error code                                | Recommendations for handling  |
|---------------|---|---|
| Solar panel   | PV high voltage protection                | 1) Ensure that the open circuit voltage of the PV module is less than or equal to the maximum input voltage.<br>2) If the open-circuit voltage of the PV module is within the normal range, please contact your dealer.   |
|               | PV low voltage protection                 | 1) Make sure that the open circuit voltage of the PV module is not lower than the maximum input voltage.<br>2) If the open-circuit voltage of the PV module is normal, please contact your dealer.  |
| Microinverter | Offline                                   | 1) Ensure that the microinverter is working properly (check that the DC voltage is within the normal range).<br>2) Verify that the SN on the microinverter label is the same as that on the monitoring platform.<br>3) If the alarm is frequent and cannot be recovered, please contact your dealer.  |
|               | High temperature derating reminder        | 1) Check the ventilation and temperature of the location where the microinverter is installed.<br>2) If the ventilation is poor or the temperature is too high, improve ventilation and heat dissipation.<br>3) If the problem persists, contact your dealer.   |
|               | Microinverter over-temperature protection | 1) Check the ventilation and temperature of the location where the microinverter is installed.<br>2) If the ventilation is poor or the temperature is too high, improve ventilation and heat dissipation.<br>3) If the problem persists, contact your dealer.   |
| Grids         | Utility low frequency protection          | 1) The alarm may occur occasionally because the grid frequency is not normal for a while, and the microinverter will automatically recover after the grid frequency returns to normal.<br>The microinverter will recover automatically when the grid frequency returns to normal.<br>2) If the alarm occurs frequently, please check whether the grid frequency is within the acceptable range.<br>3) If not, please contact your dealer. |
|               | Utility high frequency protection         | 1) Occasional alarms may be due to temporary abnormalities in the grid frequency, the microinverter will automatically recover after the grid frequency is restored.<br>2) If the alarm occurs frequently, please check whether the grid frequency is within the acceptable range.<br>3) If not, please contact your dealer.  |
|               | High mains voltage protection             | 1) When the alarm occurs occasionally, it may be due to a temporary irregularity in the grid voltage.<br>The microinverter will automatically resume when the grid voltage returns to normal.<br>2) If the alarm occurs frequently, please check if the grid voltage is within the acceptable range.<br>3) If not, please contact your dealer.  |
|               | Low mains voltage protection              | 1) Alarms occurring occasionally may be due to temporary abnormalities in the grid voltage, the microinverter will automatically recover when the voltage returns to normal.<br>2) If the alarm occurs frequently, please check if the grid voltage is within the acceptable range.<br>3) If not, please contact your dealer.   |
|               | Grid outages/disconnections               | Please check the AC switch, branch circuit breaker and AC wiring for proper function.   |
|               | Islanding protection                      | 1) Occasional alarms may be due to temporary abnormalities in the grid frequency, and the microinverter will automatically recover when the voltage is restored.<br>2) If all microinverters alarm frequently, please contact your local power operator to check the grid islanding problem.<br>3) If the alarm persists or only a few microinverters are affected, please contact your dealer.   |
|               |   |   |

## 5. Data sheet

| Nations                             |  |
|-------------------------------------|--|
| Model                               | SPD-800  |
| <b>Input Data(DC)</b>               |  |
| Recommended solar panel input power | 275-530W× 2  |
| Number of DC input connections      | MC4 × 2  |
| Max. input voltage                  | 60V  |
| PV Operating voltage                | 16-60V   |
| Start-up voltage                    | 22V  |
| MPPT tracking range                 | 22-55V   |
| MPPT tracking accuracy              | >99.5%   |
| Max. continuous input current       | 14A × 2  |
| <b>Output Data(AC)</b>              |  |
| Max. continuous output power        | 800W   |
| Nominal output voltage              | 230V   |
| Operating voltage range             | 190-270V   |
| Max. continuous output current      | 3.47A  |
| Nominal output frequency            | 50Hz   |
| Output frequency range              | 47.5-53.5Hz  |
| Maximum units per branch            | 230VAC: 10set                                      |
| THD                                 | <5%  |
| Power factor                        | >0.99  |
| Peak efficiency                     | 96%  |
| Protective class                    | Class I  |
| <b>Protection Function</b>          |  |
| Over/under voltage protection       | Yes  |
| Over/under frequency protection     | Yes  |
| Anti-islanding protection           | Yes  |
| Over temperature protection         | Yes  |
| Type of enclosure                   | IP67   |
| Operating ambient temp.             | -40°C to +65°C                                     |
| Indication light quantity           | Working status: Led light + Wi-Fi Signal Led light |
| Communication connection mode       | Wi-Fi / 2.4G                                       |
| Cooling method                      | Natural cooling(no fan)                            |
| Working environment                 | Indoor and Outdoor                                 |
| Environment altitude                | ≤ 2000m  |
| Weight                              | 3.5Kg  |
| Size (L*W*H)                        | 262mm*38mm*252.8mm                                 |
| Warranty                            | 10 Years   |

### Compliance

EN IEC 61000-6-2; 2019\EN IEC 61000-6-4; 2019\EN IEC 61000-3-2;2019\A1; 2021\EN 61000-3-3;2013\A2; 2021\IEC 62109-1 ;2010\EN 62109-1; 2010\IEC 62109-2;2011\EN 62109-2;2011\IEC 62321-3-1;2013\IEC 62321-4;2013+AMD1;2017\IEC 62321-5;2013\IEC 62321-7-1;2015\IEC 62321-7-2;2017\IEC 62321-6; 2015\IEC 62321-8;2017\IEC60529;1989 A1;1999 A2;2013\VDE-AR-N 4105;2018\VDE V 0126-1-1;2013\VDE V 0124-100;2020\ETSI EN 301 489-1 V2.2.3;2019\ ETSI EN 301 489-17 V3.2.4;2020\ETSI EN 300 328 V2.2.2;2019\EN 50665;2017\EN IEC 62311;2020

## 6. Purchase accessories separately

### 6.1 List of additional accessories and tools purchased



Note: All the above accessories are not included in the product set, please contact your local dealer to purchase them separately.

### 6.2 Parallel cable laying

- 1, Select the appropriate AC bus based on the microinverter spacing. The spacing of the AC bus connectors should be close to the spacing between the microinverters to ensure a good match between the two.
- 2, Determine the number of microinverters to be installed on each AC branch line and prepare the appropriate AC bus.
3. Remove as many sections of AC bus as necessary to make the AC cables for each branch.
4. Once the cables have been laid, install the microinverters as described in Chapter 3 of this manual.

